



Lytx[®] ER-SV2 Peterbilt Connection Guide

Last Updated: March 20, 2018

This document is to be used in addition to the Lytx[®] ER-SV2
Installation Instructions – Heavy Duty Vehicles.

Lytx, Inc.

THE DEVICE SHOULD BE INSTALLED AND MAINTAINED BY QUALIFIED TECHNICIANS. Only a properly qualified technician should install and maintain the ER-SV2. Any electrical work should be performed only by an ASE (minimum T6 & L2), MECP or equivalent certified technician with an expertise in installing and troubleshooting advanced vehicle onboard components including multiplexed circuits. Lytx, Inc. disclaims all responsibility for any damages arising from improper installation and maintenance of the ER-SV2.

© 2018 Lytx, Inc. – Confidential & Proprietary

This guide is protected as confidential and proprietary information of Lytx, Inc. Copying and use of this guide for any purpose other than installing ER-SV2 in vehicles of Lytx, Inc.'s customers is expressly prohibited. Information contained in this guide was in effect as of the date set forth above and is subject to change without notice or liability. Lytx, Inc. reserves the right to revise the information presented or to discontinue the production of parts described at any time.

CONTENTS

SAFETY INSTRUCTIONS	4
Installation Safety Warnings.....	4
Driver Safety Warnings.....	5
Adherence to Applicable Local, State and Federal Laws.....	5
USA Federal Communications Commission (FCC) Notice.....	6
Canada – Industry Canada Notice	6
Wiring Safety Warnings	7
Base Unit Installation	8
Window Unit Placement	11
Wiring Installation.....	13
Power, Ground and Ignition Locations	13
Vehicle Data Bus Connection	17
Turn Signal Connections	20
Brake Signal Connection	25

Attention!

This is not a standalone document. It is only intended to be used in conjunction with the ER-SV2 Installation Instructions – Heavy Duty Vehicles (“ER-SV2 HDV Guide”). If you do not have the ER-SV2 HDV Guide, do NOT proceed with installation until you also obtain and read the ER-SV2 HDV Guide from Lytx, Inc. U.S. Technical Support Center at 866.910.0403 or support@lytx.com

Note: Always check to make sure you have the most current guide from Lytx® before beginning any installation work. If you are installing the ER-SV2 on a model vehicle that is not covered by this guide or a model vehicle that has new connection options not shown in this guide, please contact Lytx US Technical Support Center at 866.910.0403 or email support@lytx.com and obtain the necessary guides before beginning installation.

Note: If you find any updates to recommend for this guide or an option available for use on other models or years of vehicles, please email installfeedback@lytx.com.

SAFETY INSTRUCTIONS

Installation Safety Warnings

This Connection Guide is a supplement to the ER-SV2 HDV Guide. All instructions, precautions, and warnings in the ER-SV2 HDV Guide must be followed when using this supplement. Read and follow the instructions and precautions in the ER-SV2 HDV Guide, this Connection Guide, and all documents referenced therein when installing the ER-SV2.

Read and follow the instructions and precautions in this guide and all documents referenced in this guide when installing this device. Always refer to the vehicle manufacturer's service manual for proper installation and wiring of any aftermarket devices, including the Lytx device. Failure to do so may result in property damage and/or personal injury.

WARNING: Park the vehicle on a level surface before beginning any maintenance or installation. Block the wheels to prevent the vehicle from moving. Never work under a vehicle supported only by jacks as jacks can slip and fall over.

EXPLOSION HAZARD: Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.

WARNING: Substituting or supplementing components may impair suitability and performance. If you are missing any components contact Lytx Technical Support Center at 866.910.0403 or email support@lytx.com.

WARNING: Wear safe eye protection to prevent serious eye injury when you perform vehicle maintenance or service.

THIS GUIDE IS NOT A SUBSTITUTE FOR A QUALIFIED TECHNICIAN.

THE DEVICE SHOULD NOT INTERFERE WITH THE VEHICLE'S COMPUTER SYSTEMS. The Lytx device interfaces with the vehicle's computer systems to capture data for safety analysis. However, it should not interfere with any of the vehicle's computer systems. If there is a malfunction of the vehicle's computer systems after installation, contact Lytx Technical Support Center at 866.910.0403 or email support@lytx.com immediately. Lytx recommends that you do not drive the vehicle until the malfunction is resolved. Lytx, Inc. disclaims all responsibility for any damages arising from improper installation and maintenance of the device.

WARNING: Some countries/regions have adopted laws that restrict locations where objects can be attached to the vehicle windshield. Always refer to any applicable federal, state, provincial and local laws that concern mounting devices on vehicle windshields or other locations in a vehicle before choosing a mounting location.

Driver Safety Warnings

WARNING: In order to reduce the potential danger of injuries, the driver and front passenger must always be correctly seated with seat belts correctly fastened when operating the vehicle.

DISCLAIMER: The Lytx Event Recorder is a driver aid only, not a substitute for a safe, conscientious driver. The Lytx Event Recorder cannot compensate for a driver who is distracted, inattentive or impaired by fatigue, drugs or alcohol. Whether or not the Lytx Event Recorder is in use, it is always the responsibility of the driver to take appropriate corrective action. Never wait for the device to provide a warning before taking measures to avoid an accident. Failure to do so can result in serious personal injury or death or severe property damage.

Always, it is the driver's responsibility to:

- Use safe driving techniques
- Exercise proper judgment
- Maintain a safe speed and distance between vehicles
- Take measures to avoid an accident
- Comply with all applicable laws and regulations

WARNING: In certain conditions, including inclement weather, low visibility, certain road conditions (including poor lane markings, construction zones, dirt roads, heavy or complicated traffic, and curvy and winding roads), the Lytx Event Recorder may have limited to no functionality. The Lytx Event Recorder may not detect certain objects such as motorcyclists, bicyclists or pedestrians even in the most ideal conditions. Always keep the lens and view of the Lytx Event Recorder unobstructed and properly calibrated so as not to inhibit function. Driving in certain conditions or any interference with the Lytx Event Recorder can result in false, few or no warnings. The driver must always monitor traffic and surroundings and take measures to avoid an accident; failure to do so can result in serious personal injury or death or severe property damage.

WARNING: If the Lytx Event Recorder is not functioning properly at any time, please contact your supervisor and have the device inspected immediately to correct the issue. Whether or not the Lytx Event Recorder is functioning, it is the driver's responsibility to maintain vehicle control; failure to do so can result in serious personal injury or death or severe property damage.

Adherence to Applicable Local, State and Federal Laws

WARNING: Some jurisdictions have adopted, or may in the future adopt, laws that prohibit objects from being mounted on a vehicle's windshield or other locations in a vehicle. You are responsible for complying with such laws, and Lytx, Inc. does not accept responsibility for your failure to do so.

USA Federal Communications Commission (FCC) Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this product not expressly approved by Lytx, Inc. could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

It is recommended that the antenna must not be co-located or operating in conjunction with any other antenna or radio transmitter.

Canada – Industry Canada Notice

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To prevent radio interference to the licensed service, this device must be operated indoors only and should be kept away from windows to provide maximum shielding.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son utilisation est soumise aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

Pour éviter les interférences à des services radio autorisés, cet appareil doit être utilisé uniquement à l'intérieur et doit être tenu à l'écart des fenêtres afin de fournir un blindage maximal.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Wiring Safety Warnings

WARNING: Only approved wire connection methods are recommended. Refer to the vehicle manufacturer's service manual to determine if soldering, sealing crimp connections, Add-A-Circuit, Posi-Tap, sealing butt connections, or OEM connections to open connection ports are approved. Never use plier tap products such as insulation displacement connectors (i.e. ScotchLoc connectors) when installing the Lytx event recorder.

WARNING: Never wire the Lytx event recorder in a manner that shares a connection with another aftermarket product in the vehicle. Independent connections should always be used.

WARNING: All wires that carry electrical current to the Lytx device must be fused. Failure to fuse the power, ground, and ignition wires can lead to serious personal injury and/or property damage. If any wires or cables containing fuses/fuse boxes need to be cut or otherwise shortened, always be certain to replace such fuses/fuse boxes or install new ones.

WARNING: Wire Protection: Take all necessary measures to protect all wire runs through a metal surface with a grommet or other device and all wire runs outside the vehicle cab with a loom. Always protect against wire fatigue and harness abrasion by properly attaching wires at closely spaced intervals, while avoiding contact with sharp edges or doing anything else that might result in exposed wires. All wires should be secured with tie wraps at least every one foot (30 cm/300 mm) or less. Do not over-tighten any tie wraps.

WARNING: Cable Routing: Make certain that neither the cable nor your installation activities interferes with any airbag-related mechanisms or otherwise risks affecting airbag deployment. Consult the vehicle manufacturer for the location of any airbag sensors and systems and restrictions that may apply.

WARNING — ALWAYS test the other vehicle components on the power circuit of the ER-SV2 to confirm their functionality, especially if the circuit is shared. All active faults in the vehicle system, other devices, and the ER-SV2 must be resolved prior to completing the installation.

Base Unit Installation

See the ER-SV2 HDV Guide for details on selecting a mounting location and mounting the ER-SV2. Below are some options for mounting locations that have been used, including installing the Base Unit under the passenger seat, under the driver seat, or within the dashboard of the vehicle.


1. **2011-2015 367:** Mounted behind the center




2. **2001-2007 379:** Mounted behind the center of the dash.



3. **2005-2007 387:** Mounted behind the center of the dash.

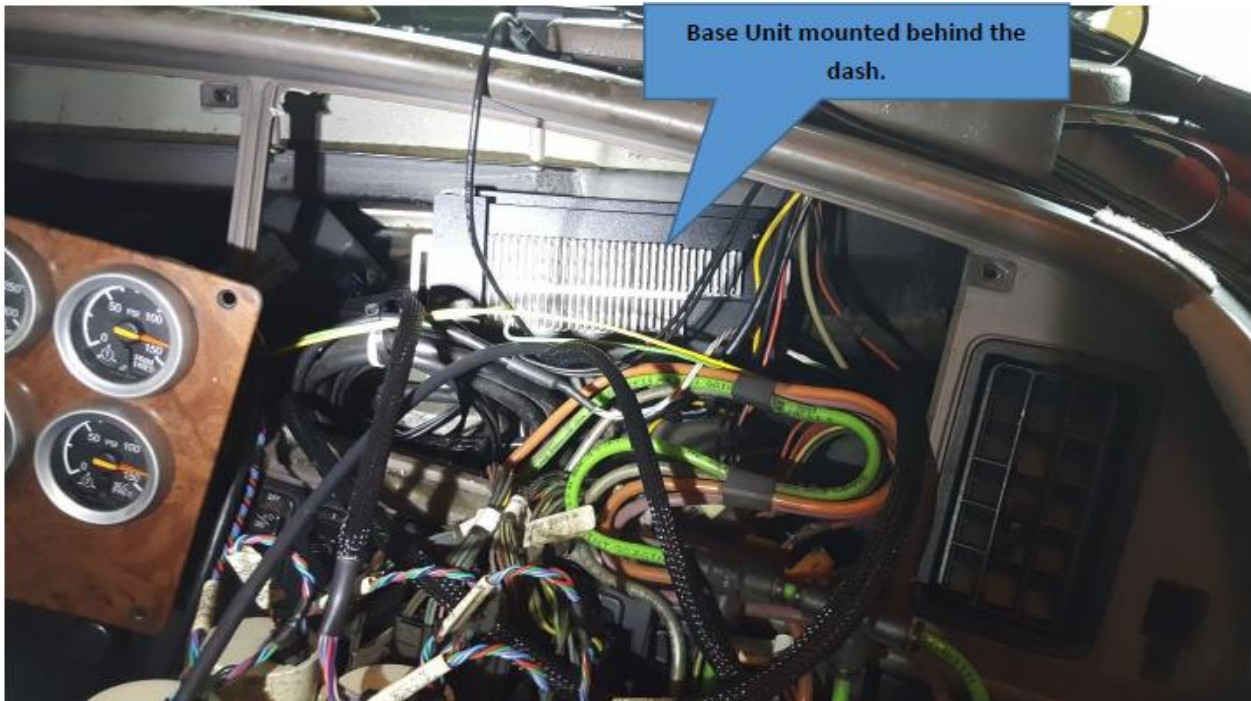

4. 2014-2014 579: Mounted behind the doghouse.

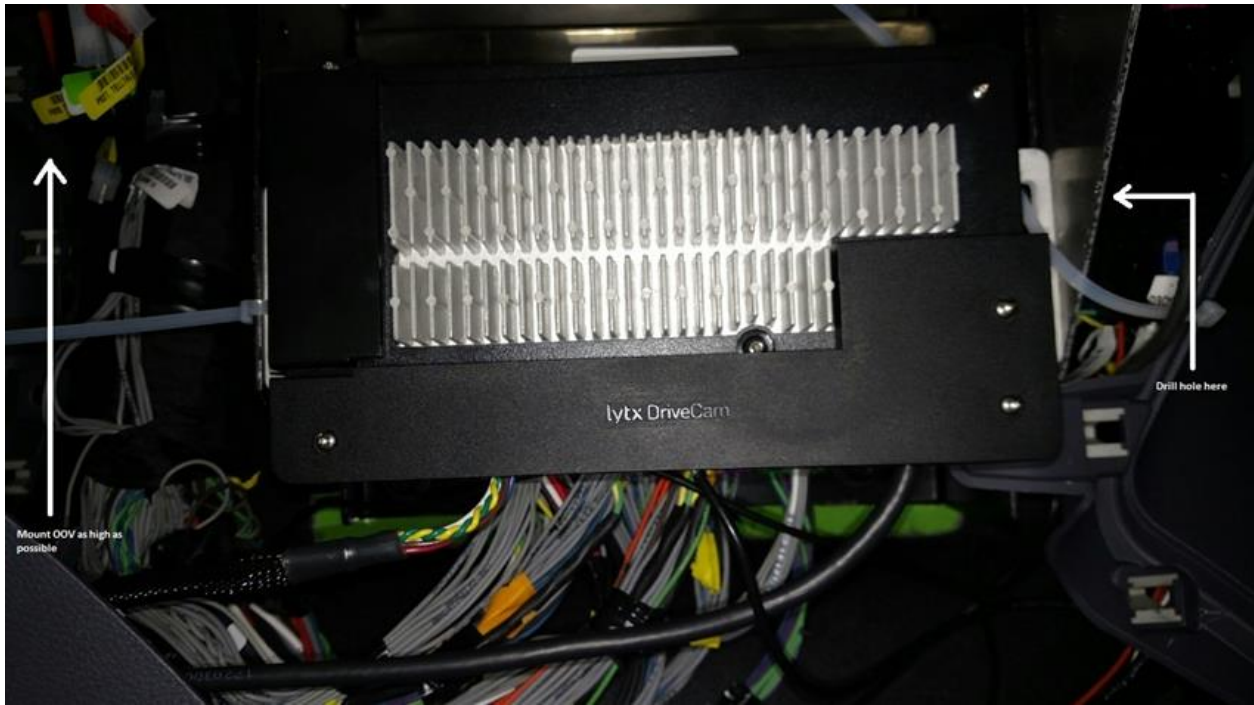

Window Unit Placement

See the ER-SV2 HDV Guide for critical information on Window Unit mounting prior to mounting the Window Unit. The Window Unit is typically mounted near the center of the windshield on the passenger's side, with the bottom of the bracket placed in the "allowed" locations as described in the ER-SV2 HDV Guide. The road-facing camera must have a view through the wiper path to operate properly. The interior-facing lens must not interfere with or be able to be blocked by sun visors. Below are examples, including models where Window Unit placement is critical due to the specifics of the vehicle.

1. Typical Window Unit Placement.



2. 2011-2015 367: Mounted to the bulkhead.



3. **2001-2007 Peterbilt 379:** Mounted to the windshield to allow the lens to see below the large visor on the front of the truck.



4. **2005-2007 387:** Mounted to the top and center of the windshield.




Wiring Installation


WARNING — Only a properly qualified technician should install and maintain the ER-SV 2. Any electrical work should be performed by an experienced technician that has the ability to install and troubleshoot advanced vehicle onboard components including multiplexed circuits. **Always test connections with a meter.** The following photos show the locations where the connection points have been found on various models. Where applicable, we have identified the model year vehicle. Other model year vehicles may have similar installation points.

Power, Ground and Ignition Locations


1. **2011-2015 367:** The power wires should be connected via a butt splice to the spare power and spare ignition wires behind the gauges. Install a 5-amp fuse in the corresponding fuse location to power these wires.

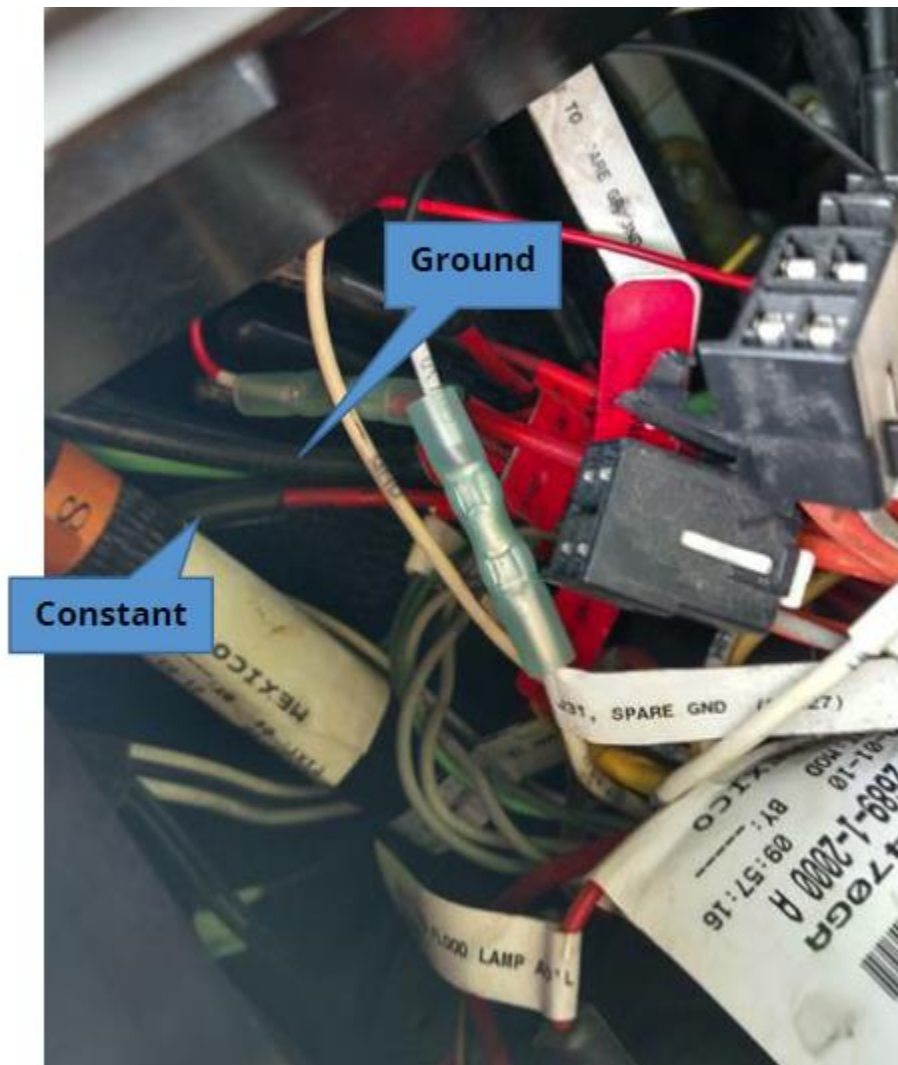


2. **2011 384:** The constant power connection should be an Add-A-Circuit in Location 6 in the fuse panel. An Add-A-Circuit in Location 13 should be used for ignition.

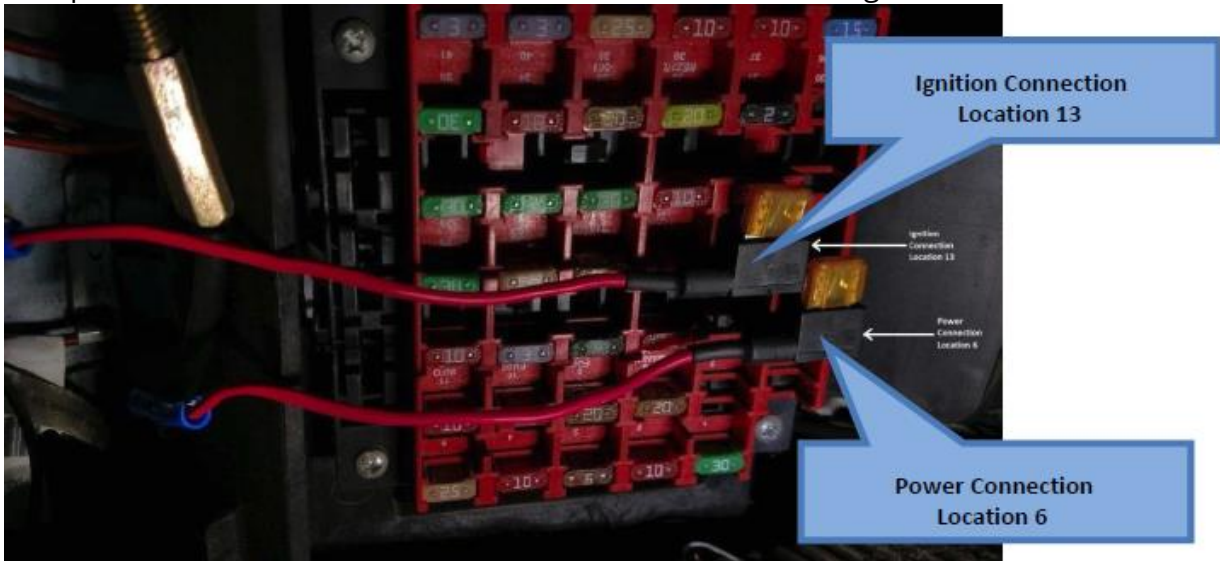




3. **2001-2007 379:** Connections are made with Add-A-Circuits and connected to the fuse panel by the drivers left foot.

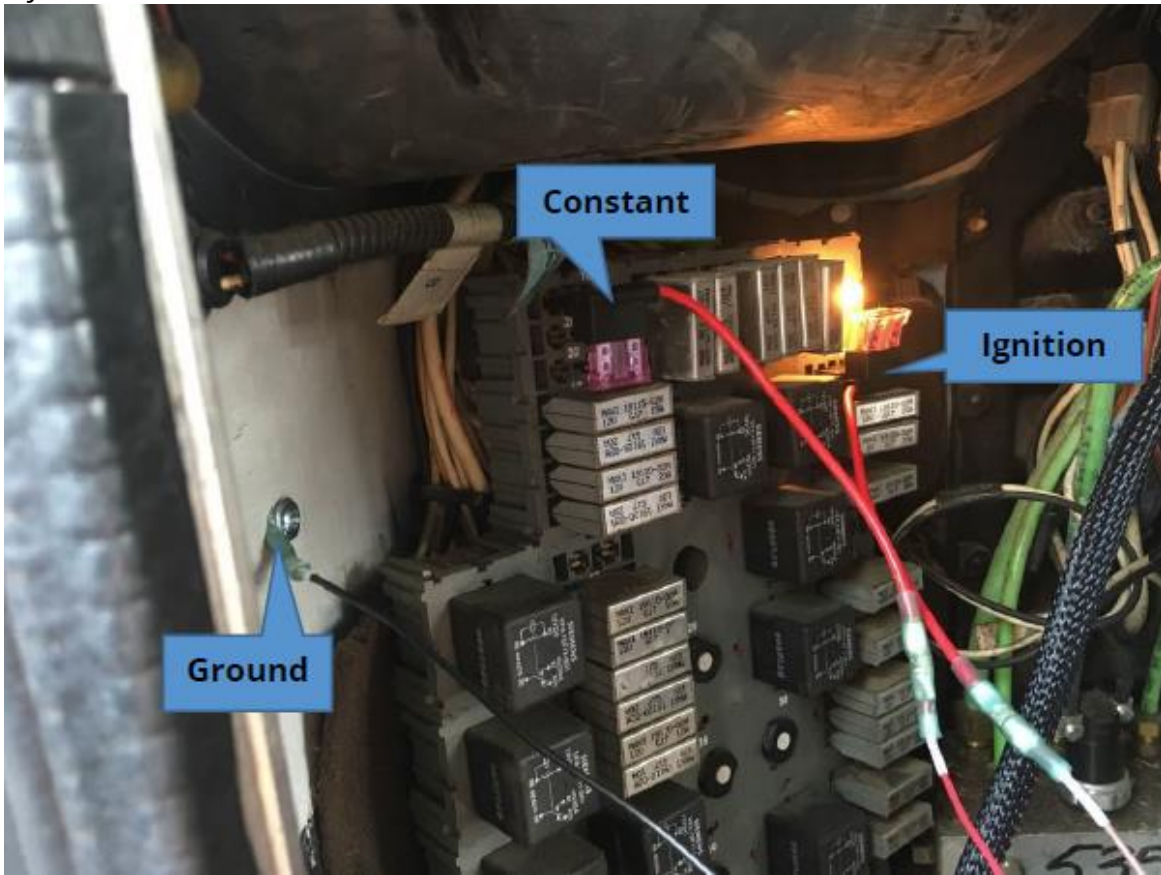

4. **2005-2007 387:** Connections are made with Add-A-Circuits and connected to the fuse panel on the right side of the dash.

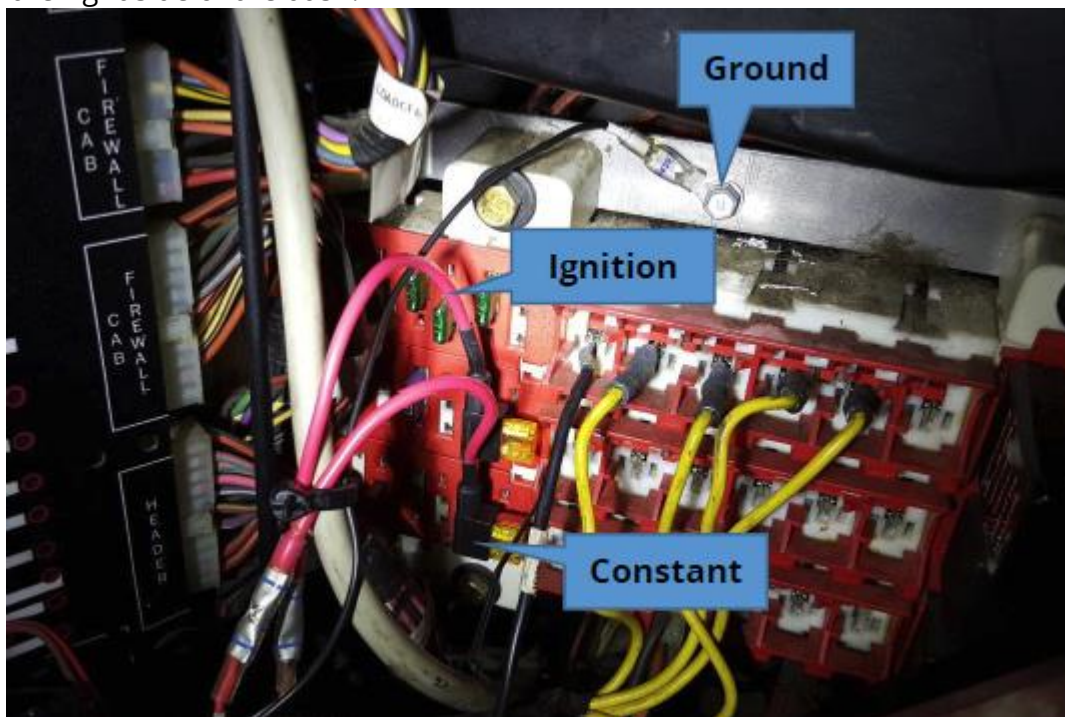


5. **2014-2014 579:** Battery and Ignition spares are wired to a plug located below the fuse panel, below the steering column. Kenworth factory pins are added to the SV2 wiring harness to connect into this plug.

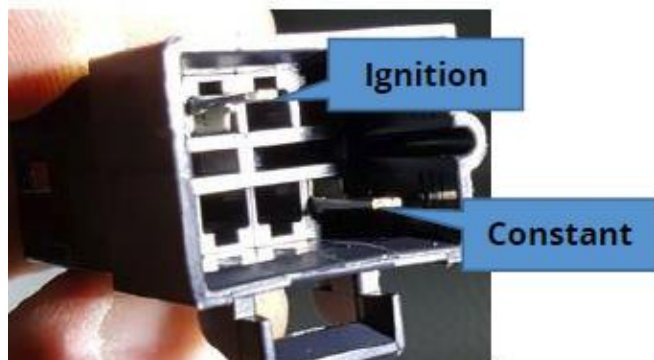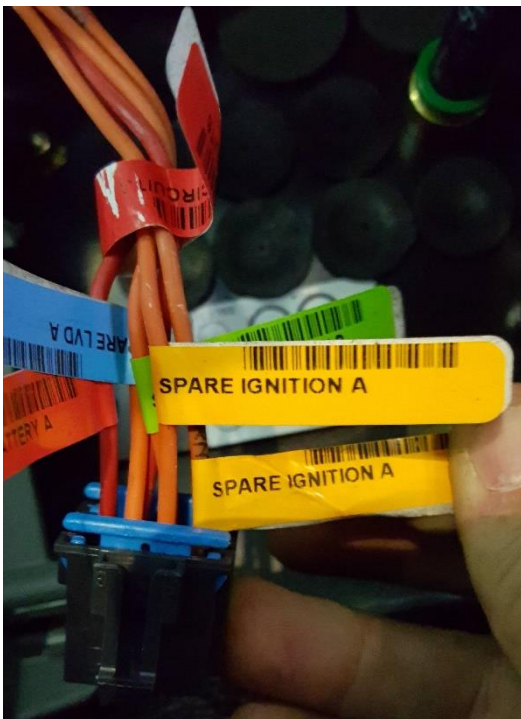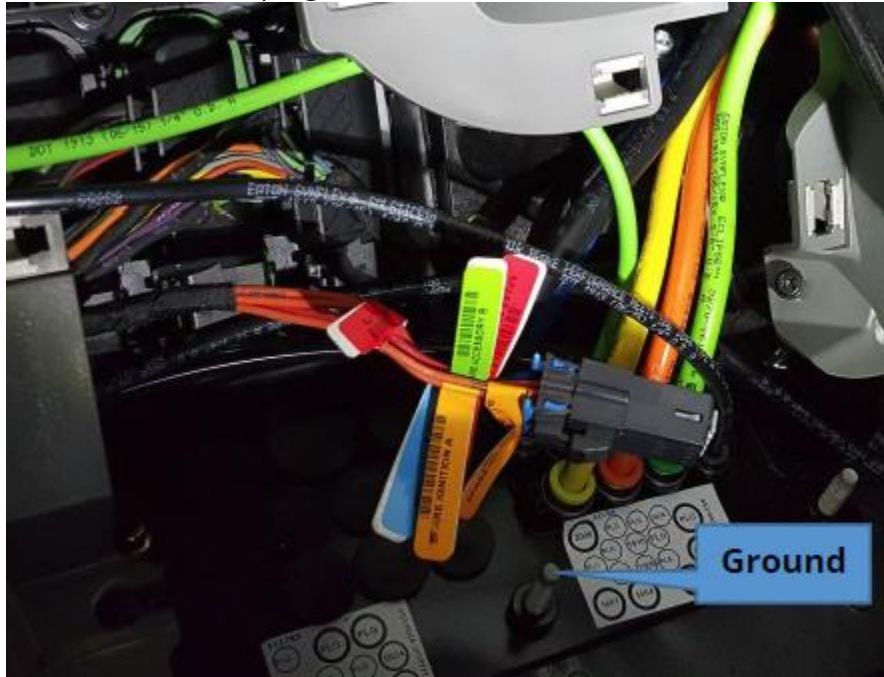

Vehicle Data Bus Connection

Class 8 vehicles 2008 and newer will have J1939 standard vehicle data bus (green and yellow twisted pair) which is read via the CAN bus coupler. Some 2006 and 2007 vehicles will also have J1939 available, but must be tested via LIT for engine speed. Vehicles 2007 and older will have J1708 vehicle data bus and must be physically tapped into. See the ER-SV2 HDV Guide for further information. For J1939 vehicles, after the CAN bus coupler is in place, use LIT to test for brake signal over the vehicle bus. If present, the physical brake signal connection will not be required.


1. **2011-2015 367:** The CAN bus coupler is attached to the J1939 backbone, and this can be located behind the gauges on the dash.

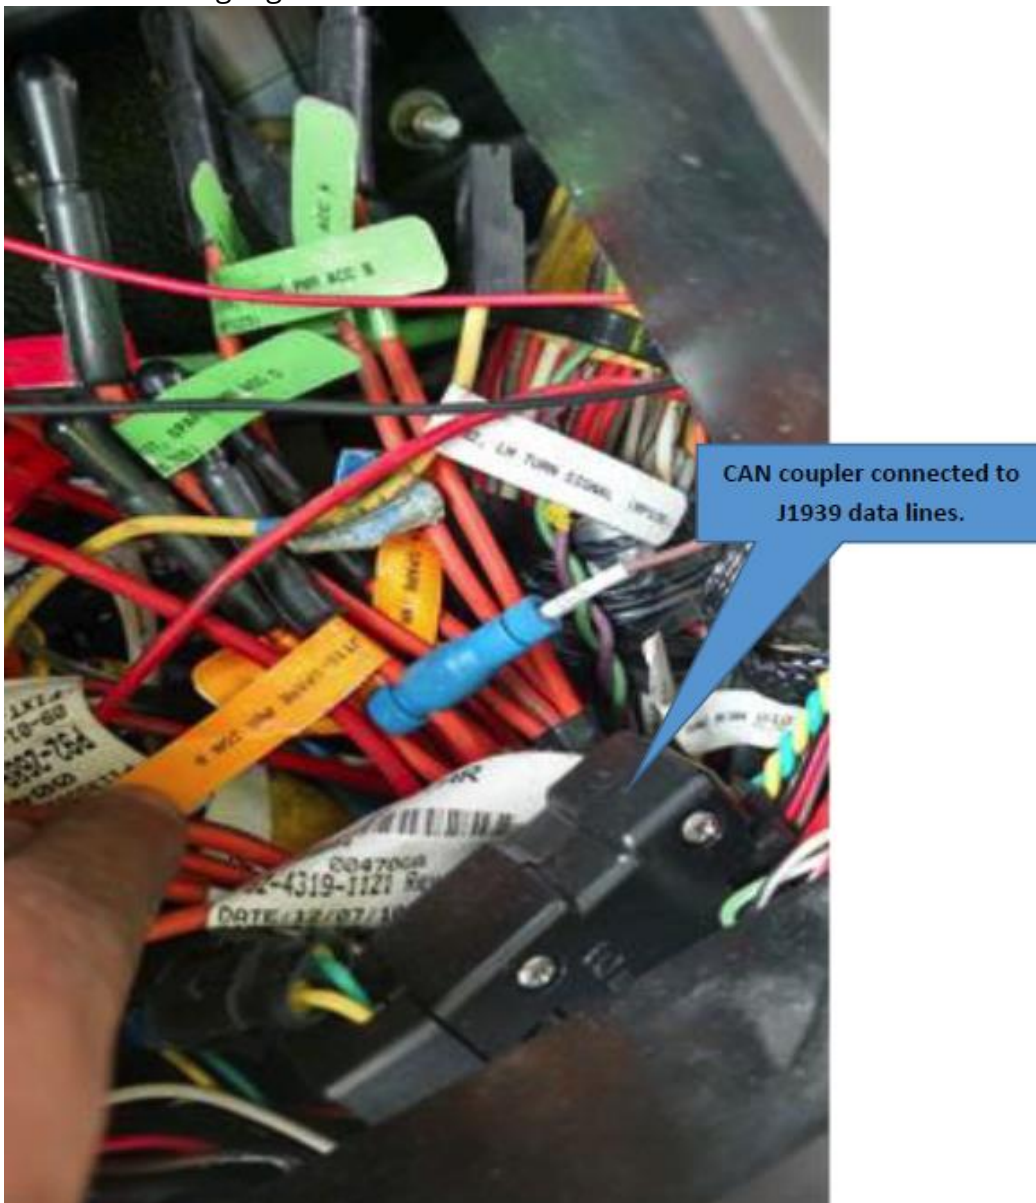


2. **2011 384:** The CAN bus coupler is attached to the J1939 backbone, and this can be located behind the diagnostic port which is below the key switch.




3. **2001-2007 379:** The J1708 connections will be found on the back of the diagnostics port. They are a twisted pair and will need to be tested for voltage to confirm.

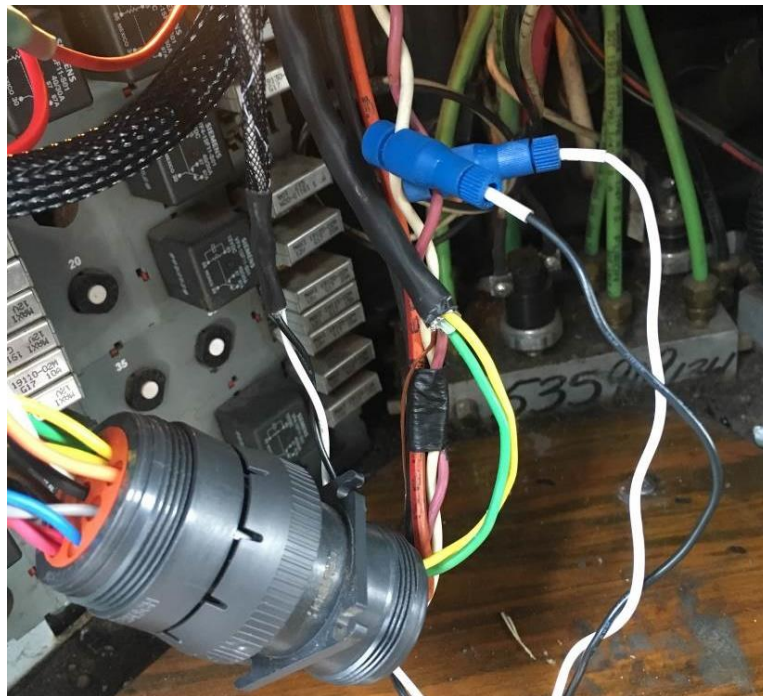

4. **2005-2007 387:** The CAN bus coupler is attached to the J1939 backbone, and this can be located behind the diagnostic port which is below the key switch.

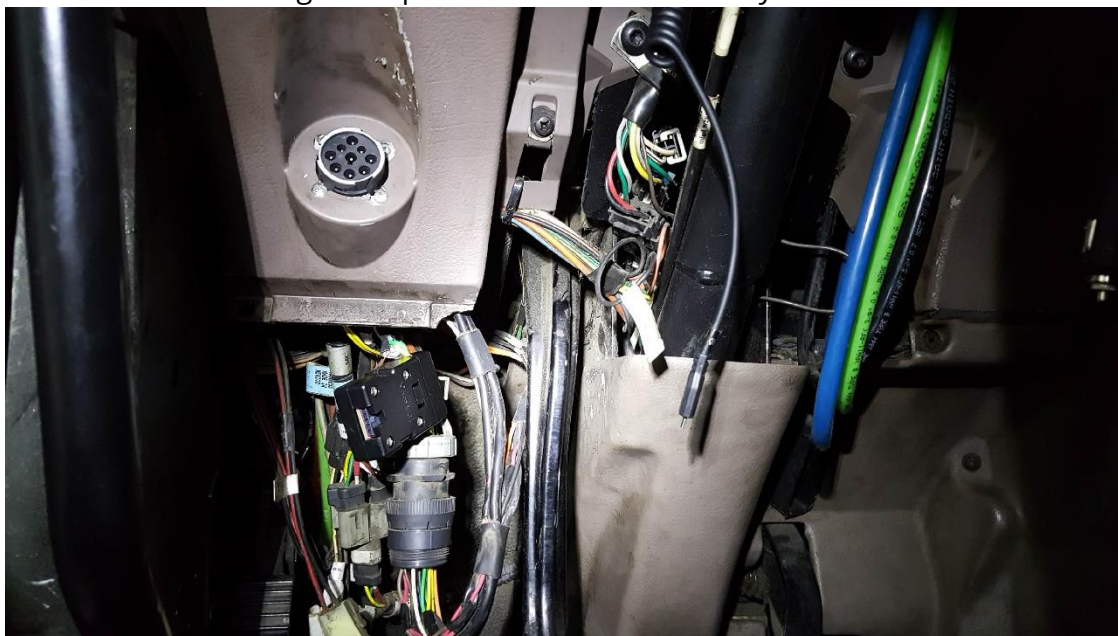


3. **2014-2014 579:** The CAN bus coupler is attached to the J1939 backbone. This is located in the area directly above the fuse panel, near where the driver's left knee would be.

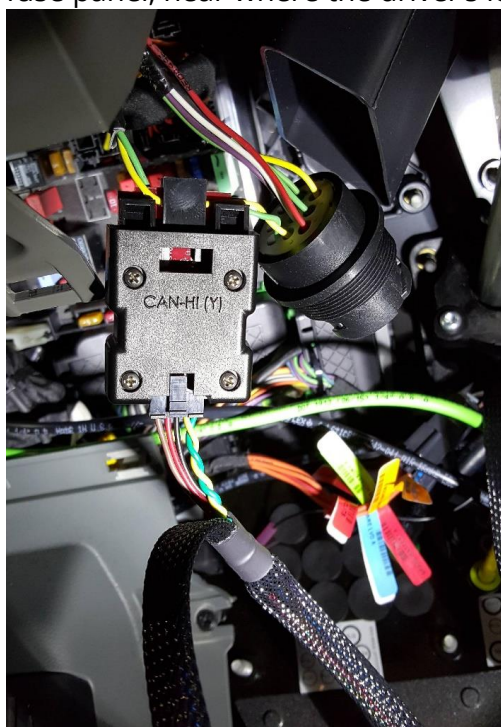


Turn Signal Connections

Turn signal connections are made from the input wires to a turn signal wire on the vehicle that cycles between 0V and 12V/24V when activated. **Always test connections with a meter.** The following photos show the locations where turn signals have been found on various models. Where applicable, we have identified the model year vehicle. Other model year vehicles may have similar installation points. Turn signal wires can always be found at the lights under the hood as a last resort.


1. **2011-2015 367:** The left turn will be connected with a Posi-Tap to a yellow wire on a black plug behind the gauges. This harness should be labeled "Turn Sign Sense" The right turn will be connected with a Posi-Tap to another yellow wire on the same black plug.

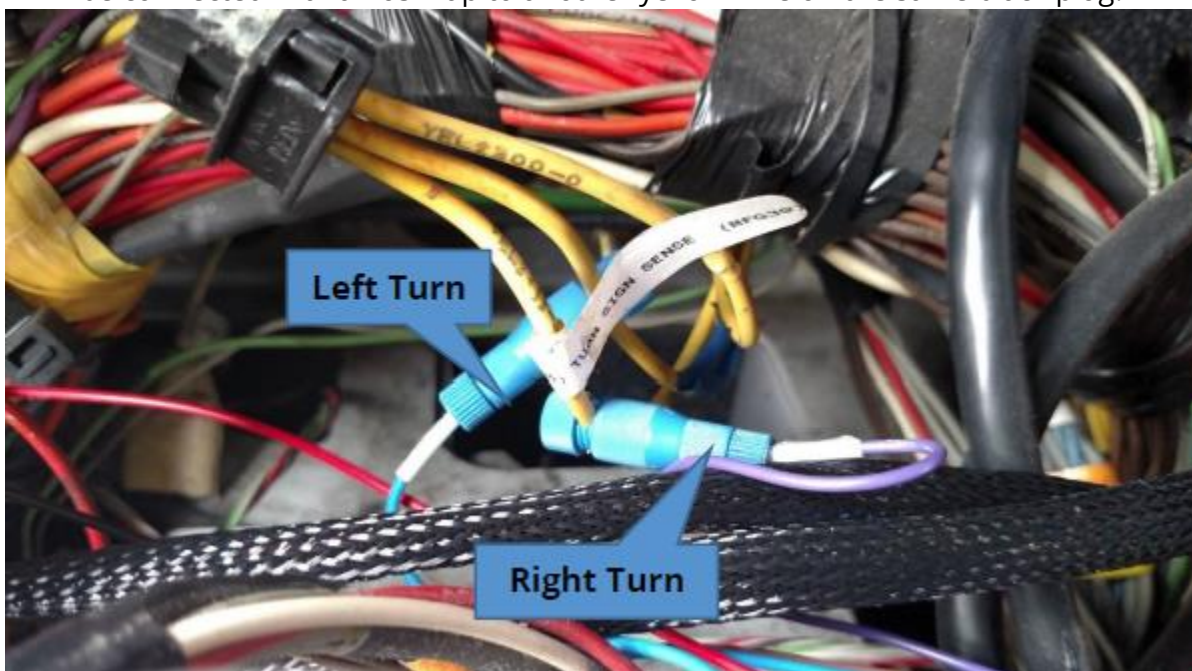


2. **2011 384:** The connection for the Left turn signal was found to be above the fuse panel on a yellow wire labeled Left Turn signal. The connection can be made with a Posi-Tap. The Right turn signal was located on the passenger side of the vehicle on a yellow wire labeled Right Turn signal. An extension wire will be necessary to reach this connection point. This wire can be routed behind the center console, over the steering console to the fuse box area. This can be made using a Posi-Tap. See photos below.

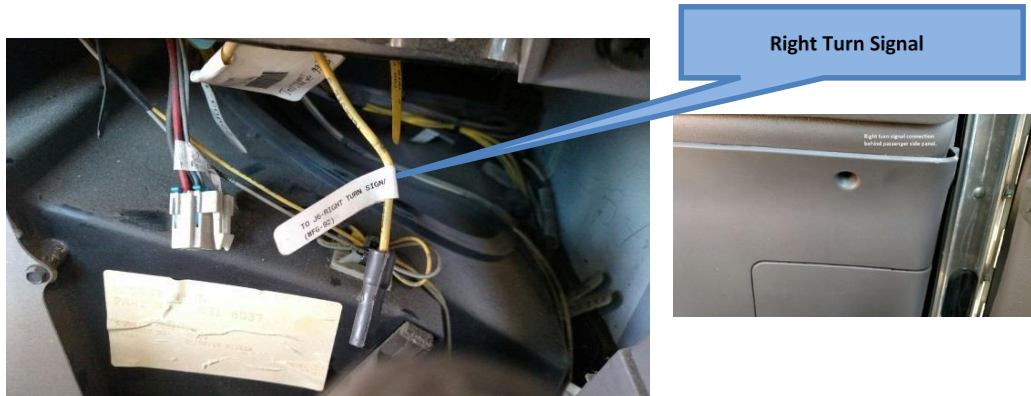


3. **2001-2007 379:** Turn signal connections are found in the harness coming out of the steering wheel. Using Posi-Taps, connect the Left Turn signal to the Green wire and the Right Turn signal to the Red wire.

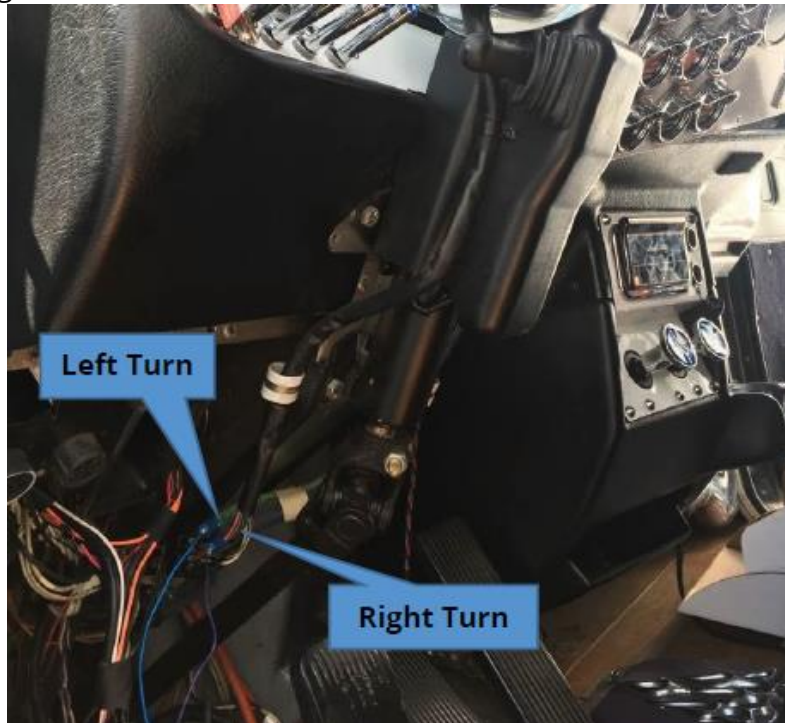

4. **2005-2007 387:** Turn signal connections are found in the harness coming out of the steering wheel. Using Posi-Taps, connect the Left Turn signal to the Green wire and the Right Turn signal to the Red wire.

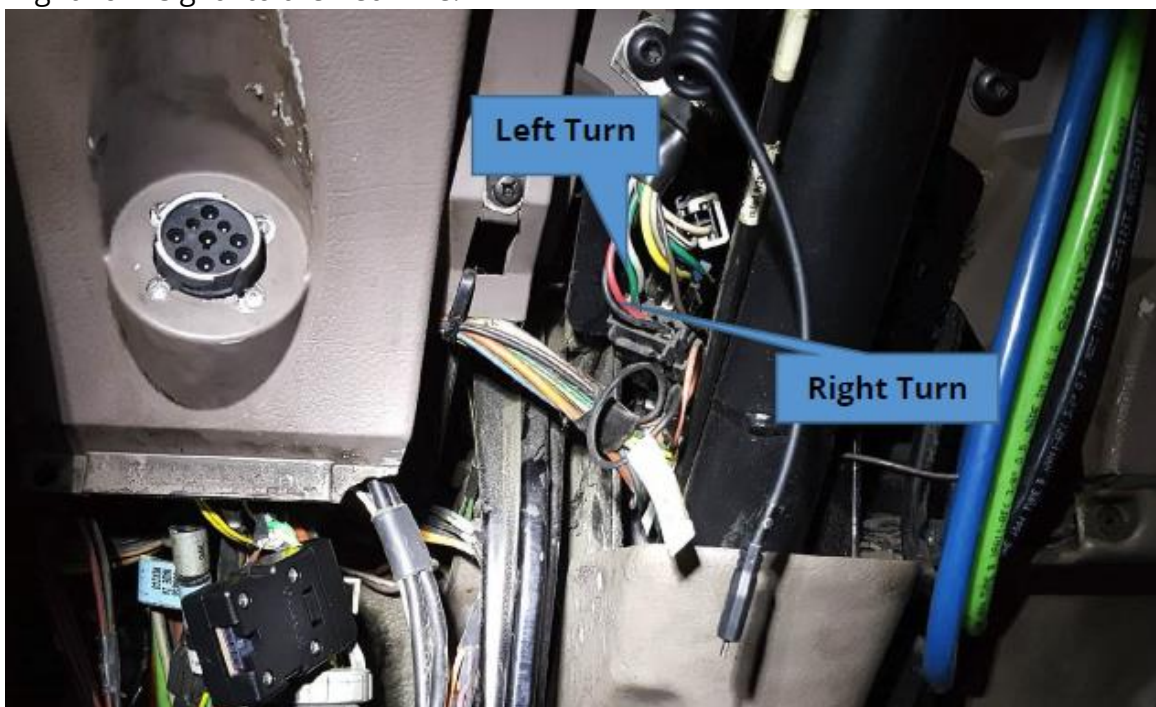

5. **2014-2017 579:** There are two possibilities for hard wiring the turn signals. The first is an optional feature and the second is available on all models.
 - a) **Turn signals from optional LDWS plug:** Some models have an optional LDWS connector in the bulkhead behind the CB radio. An extension is necessary. The extension must be routed from the fuse box area, up through the driver side A pillar, and across the bulkhead to the location behind the CB radio. The turn signals are in position A4 (right) and B4 (left) of the LDWS connector. They can be tapped into using Posi-Taps.

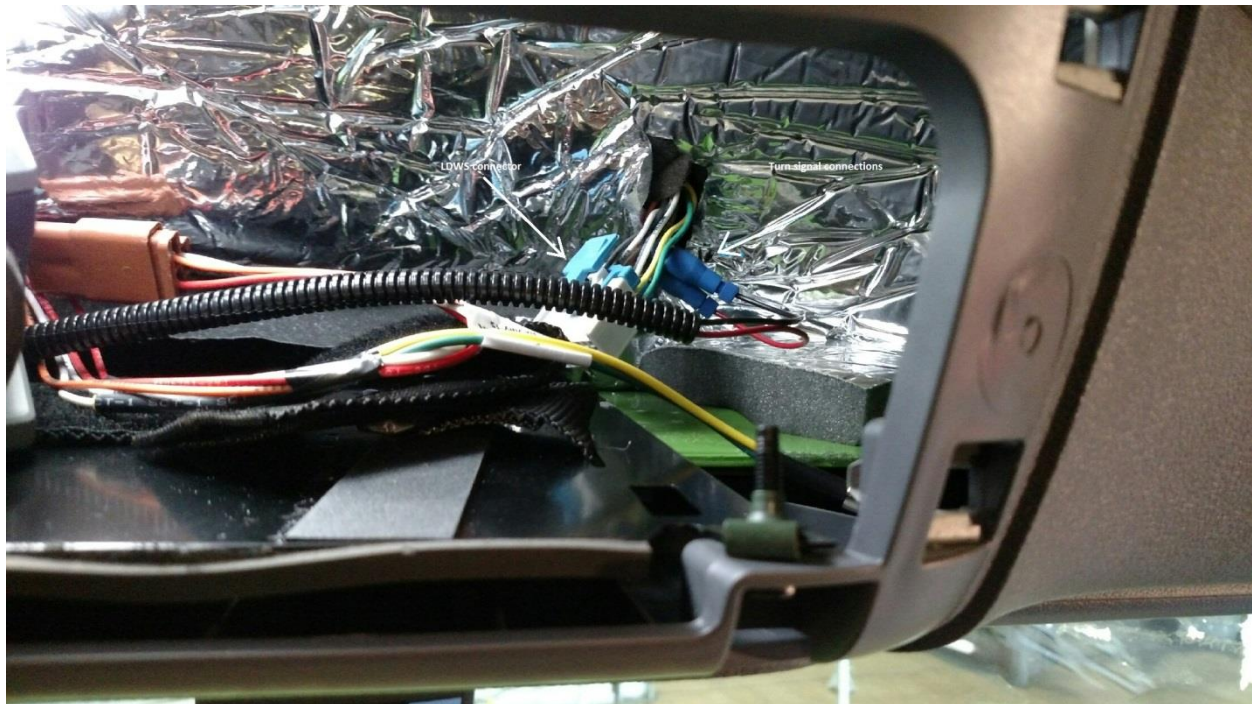

- b) **Turn Signals behind gauge cluster:** Turn signals can be found on a pigtail located behind the gauge cluster on the left side of the bundle secured with a piece of tape. Both wires are yellow, so you must test them to verify which is left and right.



Brake Signal Connection

The brake signal input is often available over the vehicle data bus for vehicles 2008 and newer. When it is not, it must be physically connected to a discrete brake signal wire. **Always test connections with a meter.** The following photos show the locations where the brake signal connection has been found on various models. Where applicable, we have identified the model year vehicle. Other model year vehicles may have similar installation points.

1. **2011-2015 367:** Available on J1939 bus. See the Lytx Installation Tool instructions for testing information.
2. **2011 384:** Available on J1939 bus. See the Lytx Installation Tool instructions for testing information.
3. **2001-2007 379:** Available on J1708 bus. See the Lytx Installation Tool instructions for testing information.
4. **2005-2007 387:** Available on J1939 bus. See the Lytx Installation Tool instructions for testing information.
5. **2014-2017 579:** Available on J1939 bus. See the Lytx Installation Tool instructions for testing information.

Note: If you find any updates to recommend for this guide or an option available for use on other models or years of vehicles, please email installfeedback@lytx.com.

ER-SV2 – LYTX US TECHNICAL SUPPORT CENTER
866.910.0403 or support@lytx.com