 


## 1. Overview


- A. Applicable Product
  - i. MODEL: CP2, CP2-LTE
- B. Use: wireless panic button which can be added to CP2 device for various use cases.
- C. Adding setup value in configuration file
  - i. [DEVICE] BT\_PANIC\_DEVICE : 0: none, 1:Flic Button
  - ii. Or can be set with the Config tool



- 1.
- iii. Updated CP2 3.1.1 config tool:  
[https://smartwitness.com/software/CP2\\_Configtool\\_3.1.1.zip](https://smartwitness.com/software/CP2_Configtool_3.1.1.zip)

## 2. Pairing Mode Operation

- A. CP2 enters pairing mode when you press and hold the panic button for 5 seconds (pairing mode will be enabled for 20 seconds)
    - Flic Button: Press the Flic button for 7 seconds to complete the pairing
  - B. LED Operation
    - i. RED/BLUE LED is blinking during the Pairing mode.
  - C. Pairing Device History Log
    - i. Device information is removed after entering Paring Mode.
    - ii. Device information after Pairing is stored in NAND (flic.sqlite3)
  - D. Event Operation
    - i. Same with Panic button on device. Panic Event should be enabled on the device as well as Smart API platform in order to receive the callback messages (webhooks).
3. Connection Failure when the button is disconnected more than 10 seconds.
- i. Connection Failure or No Pairing device information: System Warning on external device error

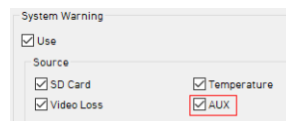

## How to pair

- Press and hold the Panic button of CP2 for 5 seconds.
- Then RED/BLUE LED is blinking for 20seconds.
- Press and hold the Flic button for 7seconds

If you want to pair another Flic button, then repeat Step1 to Step3

Then the first Flic button pairing information will be removed and CP2 will only have 2<sup>nd</sup> Flic button pairing information only.