




samsara


# Asset Gateway

## POWERED ASSET INSTALL GUIDE


### What's included:

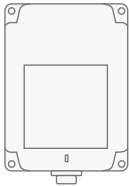

1x Asset Gateway

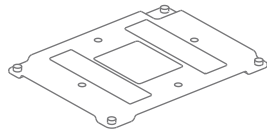


1x Mounting Plate

 

1x Power Cable



 
1x Accessory Wire



4x Self-Tapping Screws



 
4x Flat-End Screws



Ring Terminals



Zip Ties

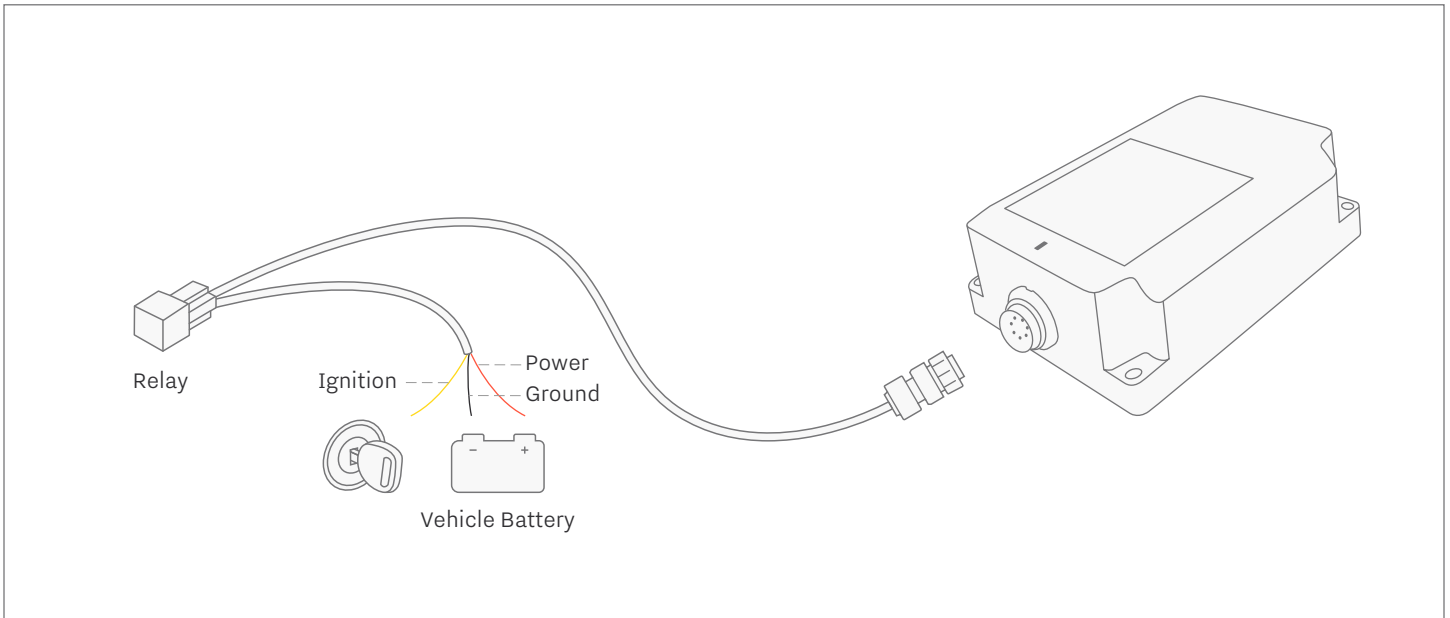

## 1 Choose location for installation depending on asset type and use case:

- To enable solar recharging, choose a position facing the sun
- To reduce theft and detection, secure inside the engine compartment

## 2 Securely attach AG24 to asset:

- Attach mounting plate using adhesive and secure with 4 self-tapping screws (provided)
- Secure AG24 to mounting plate using 4 flat-end screws (provided)

## 3 Plug cable into AG24:

- Twist to secure
- Light turns on when activated\*

## 4 To power the AG24:

- Connect the red wire labeled power to the continuous power source (i.e. battery positive terminal).
- Connect the black wire labeled ground to the ground (i.e. battery negative terminal).

## 5 To detect when the ignition is on:

- Connect the yellow wire labeled ignition to the switched power source
- If yellow wire is too short, extend with accessory wire
- When ignition is off, the relay prevents vehicle power drain. AG24 will function on internal battery for up to 3 months

## 6 Secure the cable (optional)

- Use zip ties (provided) to ensure that the cable does not obstruct activity